

# Hand Truck Maintenance Schedule

In order to ensure that your B&P Manufacturing material handling product gives years worth of trouble-free service, we highly recommend performing the following preventative maintenance steps in order to assure safety and performance:

## DAILY

1. Check tire pressure.
2. Visually inspect for damage.
3. Test proper operation of brakes.

## WEEKLY

1. Check the tightness of nose plate fasteners.
2. Check the tightness of handle fasteners.

## MONTHLY

1. Check tires for cracks or delaminating.
2. Inspect frame rivets.
3. Inspect welded joints for bending or cracks.
4. Inspect wheel bearings for noise and run out.
5. Inspect axle cotter pins.
6. Adjust brakes if needed.

## ANNUALLY

1. Power wash your hand truck.
2. Inspect wheel bearings and axles for wear.
3. Check brake pads and brake shoes.
4. Grease wheel bearings and axles.



8051 E. Boon Road  
Cadillac, MI 49601

(800) 334-7141

bpsales@bpmfg.com  
www.bpmfg.com  
www.bpmfgdefense.com

