



**INSTRUCTIONS**

NOTE: The 2 swivel casters, the handle, and the optional floor lock are installed at the same end of the platform truck. The 2 rigid casters go on the opposite end.

Turn the platform over, so the underside is facing up. Locate a rigid caster A1, onto the corner mounting plate, then insert carriage bolts A3, from the inside of the platform mounting plate. Install flat washers A4, and locknuts A5, from the caster plate side. **IMPORTANT:** See View "B". Make certain that the rigid casters are aligned parallel with the edge of the platform truck, then tighten the fasteners. Install the 2nd rigid caster the same way.

Install the 2 swivel casters A2, at the other end the same way, EXCEPT: Parallel alignment is not necessary, however an option for appearance only.

**OPTIONAL FLOOR LOCK, B1**

NOTE B2: Locate the floor lock onto the middle plate with the foot pedal facing outward and aligned squared up to the platform. Install fasteners B3, B4, and B5, the same way as with the casters.

**PARTS LIST-CASTER WHEELS**

ITEM	PART NO.	NAME	MATL/SPEC.
A1	per cust. order	Caster Wheel, Rigid	
A2	per cust. order	Caster Wheel, Swivel	
A3	8005-002	Carriage Bolt	3/8-16x1.00 lg.
A4	8003-006	Flat Washer	3/8 ID.
A5	8001-006	Locknut	3/8-16

Items A3, A4, & A5 above are part of hardware pack #2800-H1, (16 pcs. of each).

**PARTS LIST-FLOOR LOCK**

ITEM	PART NO.	NAME	MATL/SPEC.
B1	per cust. order	Floor Lock	
B3	8005-002	Carriage Bolt	3/8-16x1.00 lg.
B4	8003-006	Flat Washer	3/8 ID.
B5	8001-006	Locknut	3/8-16

Items B3, B4, & B5 above are part of hardware pack #2800-H2, (4 pcs. of each).

CASTER WHEELS AND OPTIONAL FLOOR LOCK INSTALLATION ON PLATFORM TRUCKS