
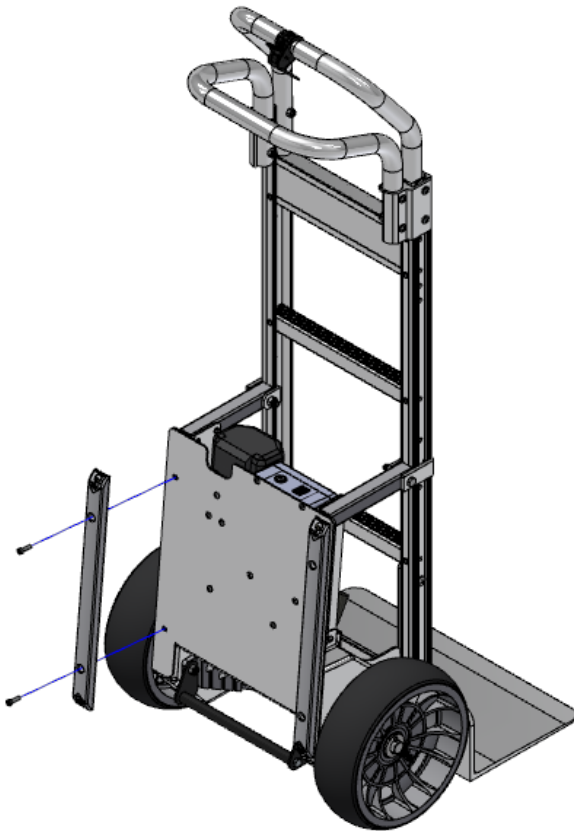


Xcelerator Wear Strip Replacement Instructions

Item	Description	Qty.	Part No.
A	Wear Strip	2	8039-009
B	Pan Head Screw, #10-24 X 1"	4	8068-053
C	Medium Strength Thread Locker	AR	8278-003

Tools Required:

(1) #2 Phillips Screwdriver

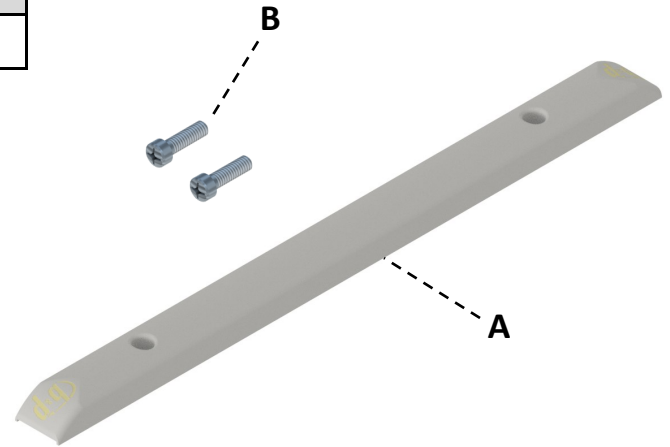

1. Remove pan head screws and the used wear strips.

Note: Remove only two (2) screws at a time to keep the back plate in place.

2. Apply a small amount of thread locker (C) to the pan head screws (B) and reattach the replacement wear strip (A).

www.bpmfg.com

8051 East Boon Road | Cadillac, MI 49601

(800) 334-7141



B&P MANUFACTURING

Engineered Delivery Products